



ADAPTOR

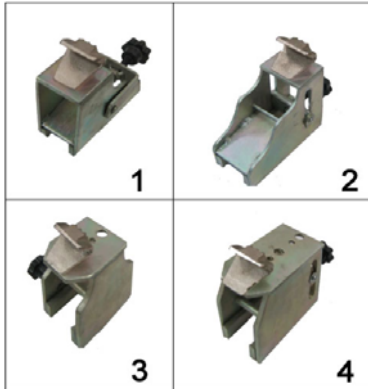


A \ B	1	2	3	4
Type	CFJ-09	CFJ-25	CFJ-09-25	CFJ-08-27

For Tyre Changer

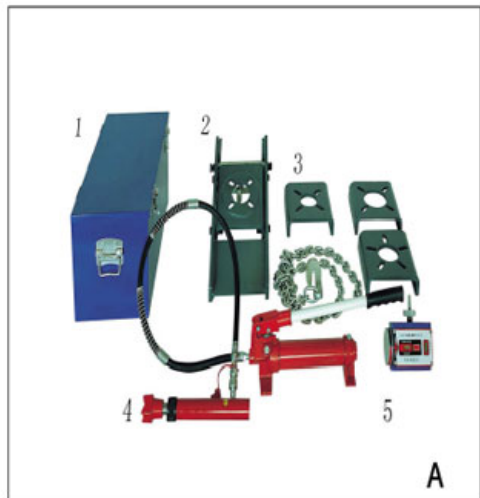

A. Correcting unit

1. Kit
2. Correction Holder
3. Combine Board
4. Oil Jack
5. Horizontal Adjustment

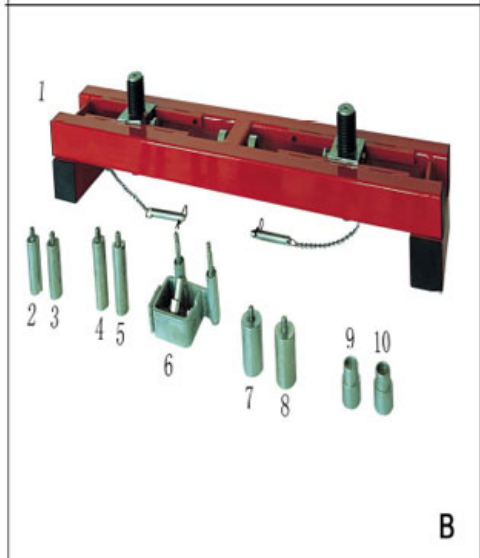


B. Localizer

1. Localizing Holder
2. Setting Terminal A1
3. Setting Terminal A2
4. Setting Terminal B1
5. Setting Terminal B2
6. Correcting Tool for Angle Of Flare
7. Setting Terminal C1
8. Setting Terminal C2
9. Setting Terminal D1
10. Setting Terminal D2

For Wheel Alignment

ADAPTOR

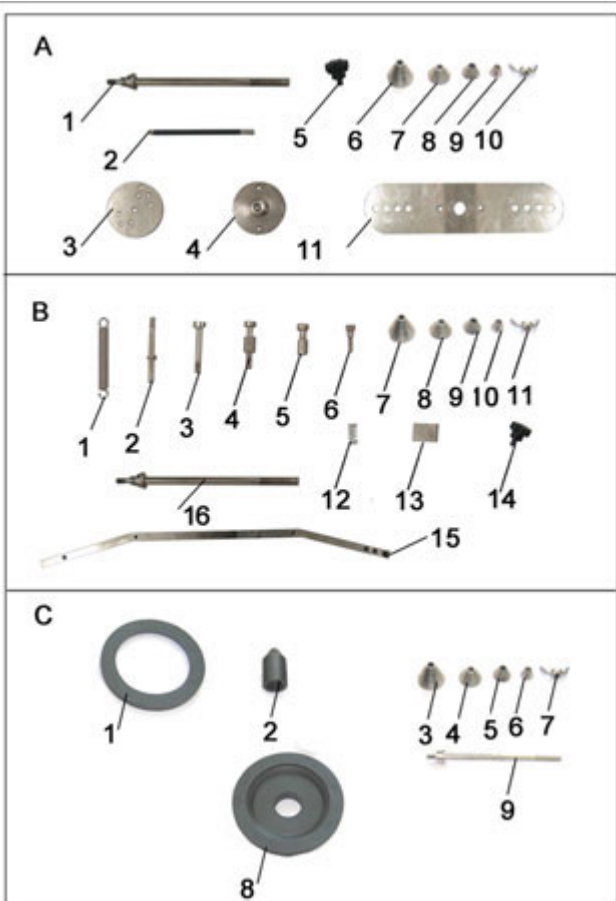

For Wheel Balancer

Adaptor A

- 1.Orientation Screw
- 2.Orientation Rooter
- 3.Orientation Disk
- 4.Orientation Flange
5. Clubs Bolt
- 6.Cone A
- 7.Cone B
- 8.Cone C
- 9.Cone D
10. Wing Nut
- 11.Orientation Board

Adaptor B

- 1.Big Spring
- 2.Pin
3. Bolt A
4. Bolt B
5. Bolt C
6. Bolt D
7. Cone A
8. Cone B
9. Cone C
10. Cone D
11. Wing Nut
- 12.Small Spring
13. Link Block
14. Clubs Bolt
15. Orientation Board
16. Orientation Screw

Adaptor C

- 1.Seal Ring
- 2.Orientation Cone
3. Cone A
4. Cone B
5. Cone C
6. Cone D
7. Wing Nut
- 8.Small Orientation Disk
9. Orientation Screw