




Length (5" ~ 40")



PP Melt Blown Filter



Stirring Wound Filter

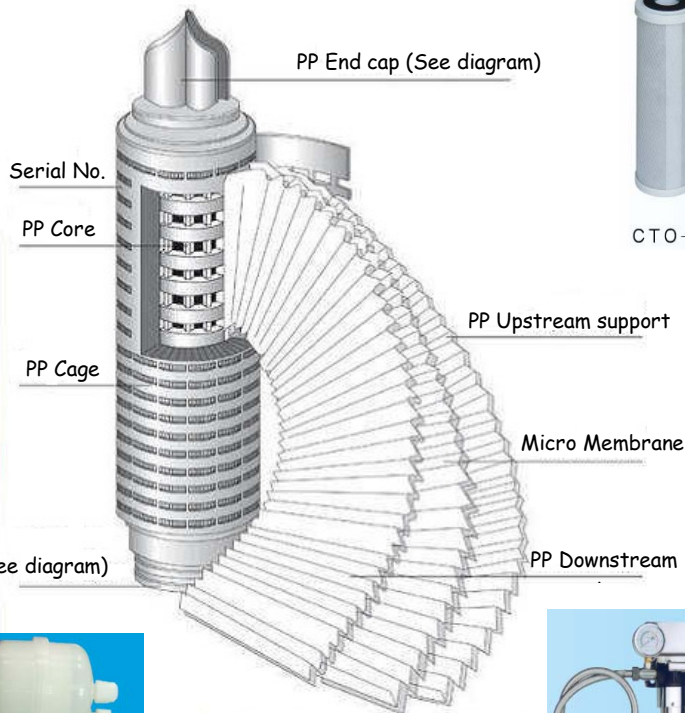

CTO-1

CTO-2

CTO-BB

ACF-1

ACF-BB



CE-3

PE-1


GAC/P P-1

SH-A20

SH-A10



Capsule Filter

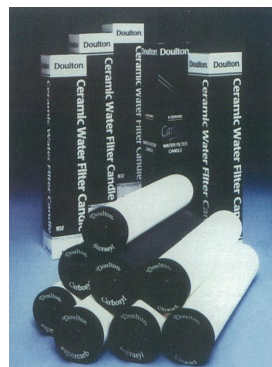

Ceramic Dolton



Liquid Filter Bag



SP-10B2




SP-10A3




Filmtec R.O Membrane



Hollow Fiber Membrane UF Filtration

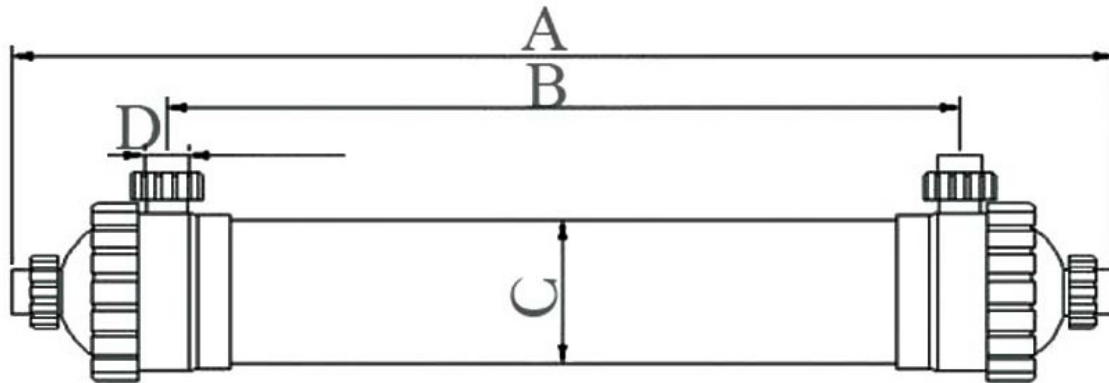


Membrane Vessel

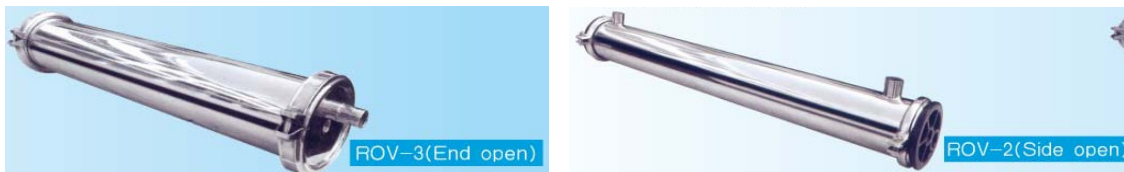

Filtration Media



UV Sterilizer Series

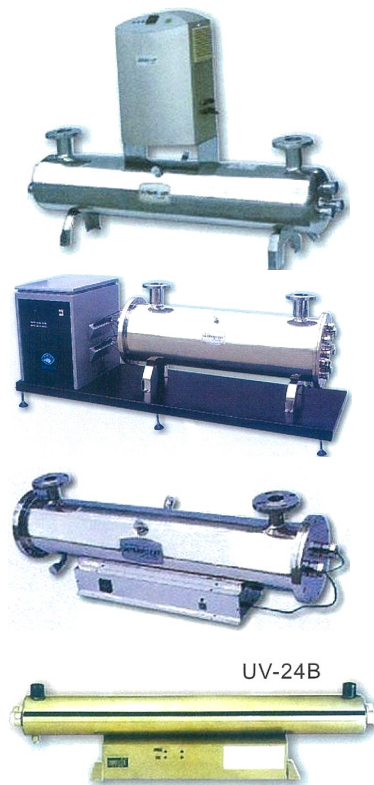

Custom D.I water Series



D.I Tank can be Consist of below items:

1. Carbon Ex-change Tank: -
The most often used for water treatment remove taste, odor and chlorine.
2. Cation Ex-change Tank:-
To captured positively charged ion in water such as calcium, magnesium, potassium and sodium
3. Anion Ex-change resin:-
Removes negatively charged ions from process water such as chlorides, nitrates, carbonate, bicarbonates, sulfates, and silica. We have the capability of utilizing either Weak Based Anion (WBA) or Strong Based Anion (SBA) resins in our exchange tanks. This ensures that the most cost effective solution for the customer is utilized
4. Mixed-Bed De-Ionizer:-
These beds, mixed with 60% anion resin, 40% cation resin, provide the highest water quality possible.